

Taking care of your tablet

- Your tablet should always be in its protective case.
- Always store your tablet facing down to avoid damaging the display.
- Do not place anything heavy on top of your tablet.
- Do not drop your tablet.
- Do not block holes or openings on your tablet.
- Do not leave the tablet in hot places or put it in direct sunlight.
- Do not charge it on carpets, rugs or beds.
- Avoid eating or drinking around your tablet.
- Turn off and shut down your tablet when you're not going to use it for a long time.
- To clean your tablet's display screen: wipe the screen surface gently using the soft cotton cloth provided with the tablet. Never clean the display with tissues or paper towels as they will scratch it.



Accidental spills and breakages

- If the tablet gets wet, stop using it and let your teacher or parent know straight away.
 - If the tablet or its accessories break, stop using them and let your teacher or parent know.
- Caution: Your tablet is not waterproof.**

Caring for Your Pen

- Use the stylus provided only to write or tap on the display.
- Do not tap heavily on the display.

Caring for Your Headphones

- Do not pull on or twist the cord of the headphones.
- When removing headphones from your tablet always pull out the plug, not the cable.
- Always keep the headphones in their protective case.

